2.Exploded Views and Parts List

2-1 Cassette Deck Exploded View and Parts List

* AUTO REVERSE ; ADR249BTR2 (OPTION)

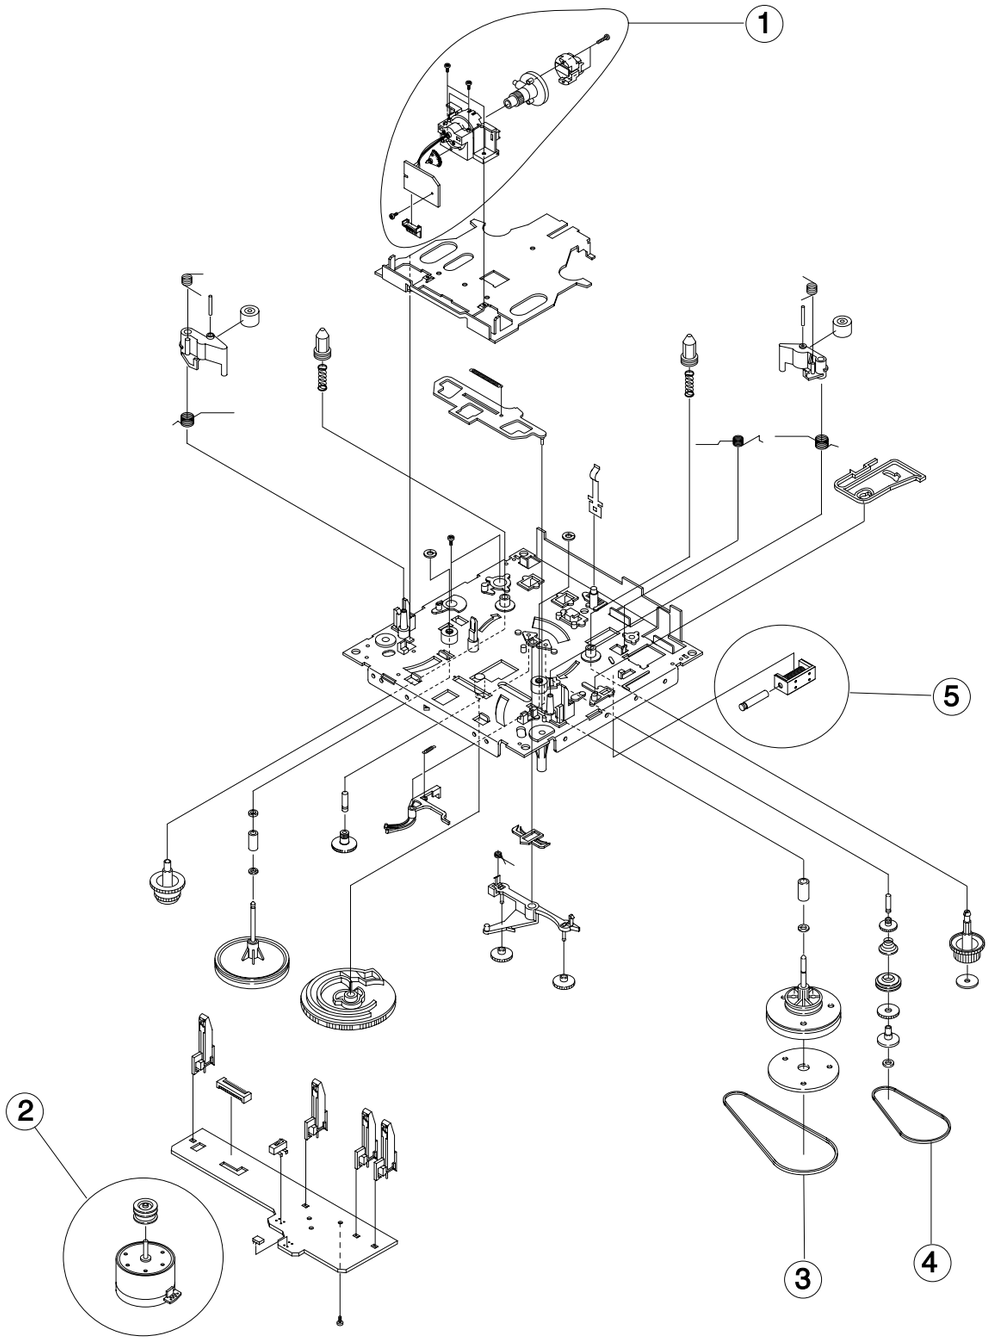

No.	Code No.	Description	Specification	Remarks
	AH59-01304A	**DECK-CASSETTE**	**ADR249BTR2**	
1	AH81-01410A	ASS'Y HEAD	TR56RAF2N1	M59-11013F
2	AH81-01412A	ASS'Y MOTOR	EG-503AD-2B	M91-15013Y
3	AH81-00144A	BELT FR	ADR2400-MAIN64.6	6602-001050
4	AH81-01411A	BELT SUB	37.1X1.1X1.1	6602-K0001A
5	AH81-00102A	SOLENOID	DAT-05A1	MT75-00049A

MM-ZJ9 EXPLODED VIEW

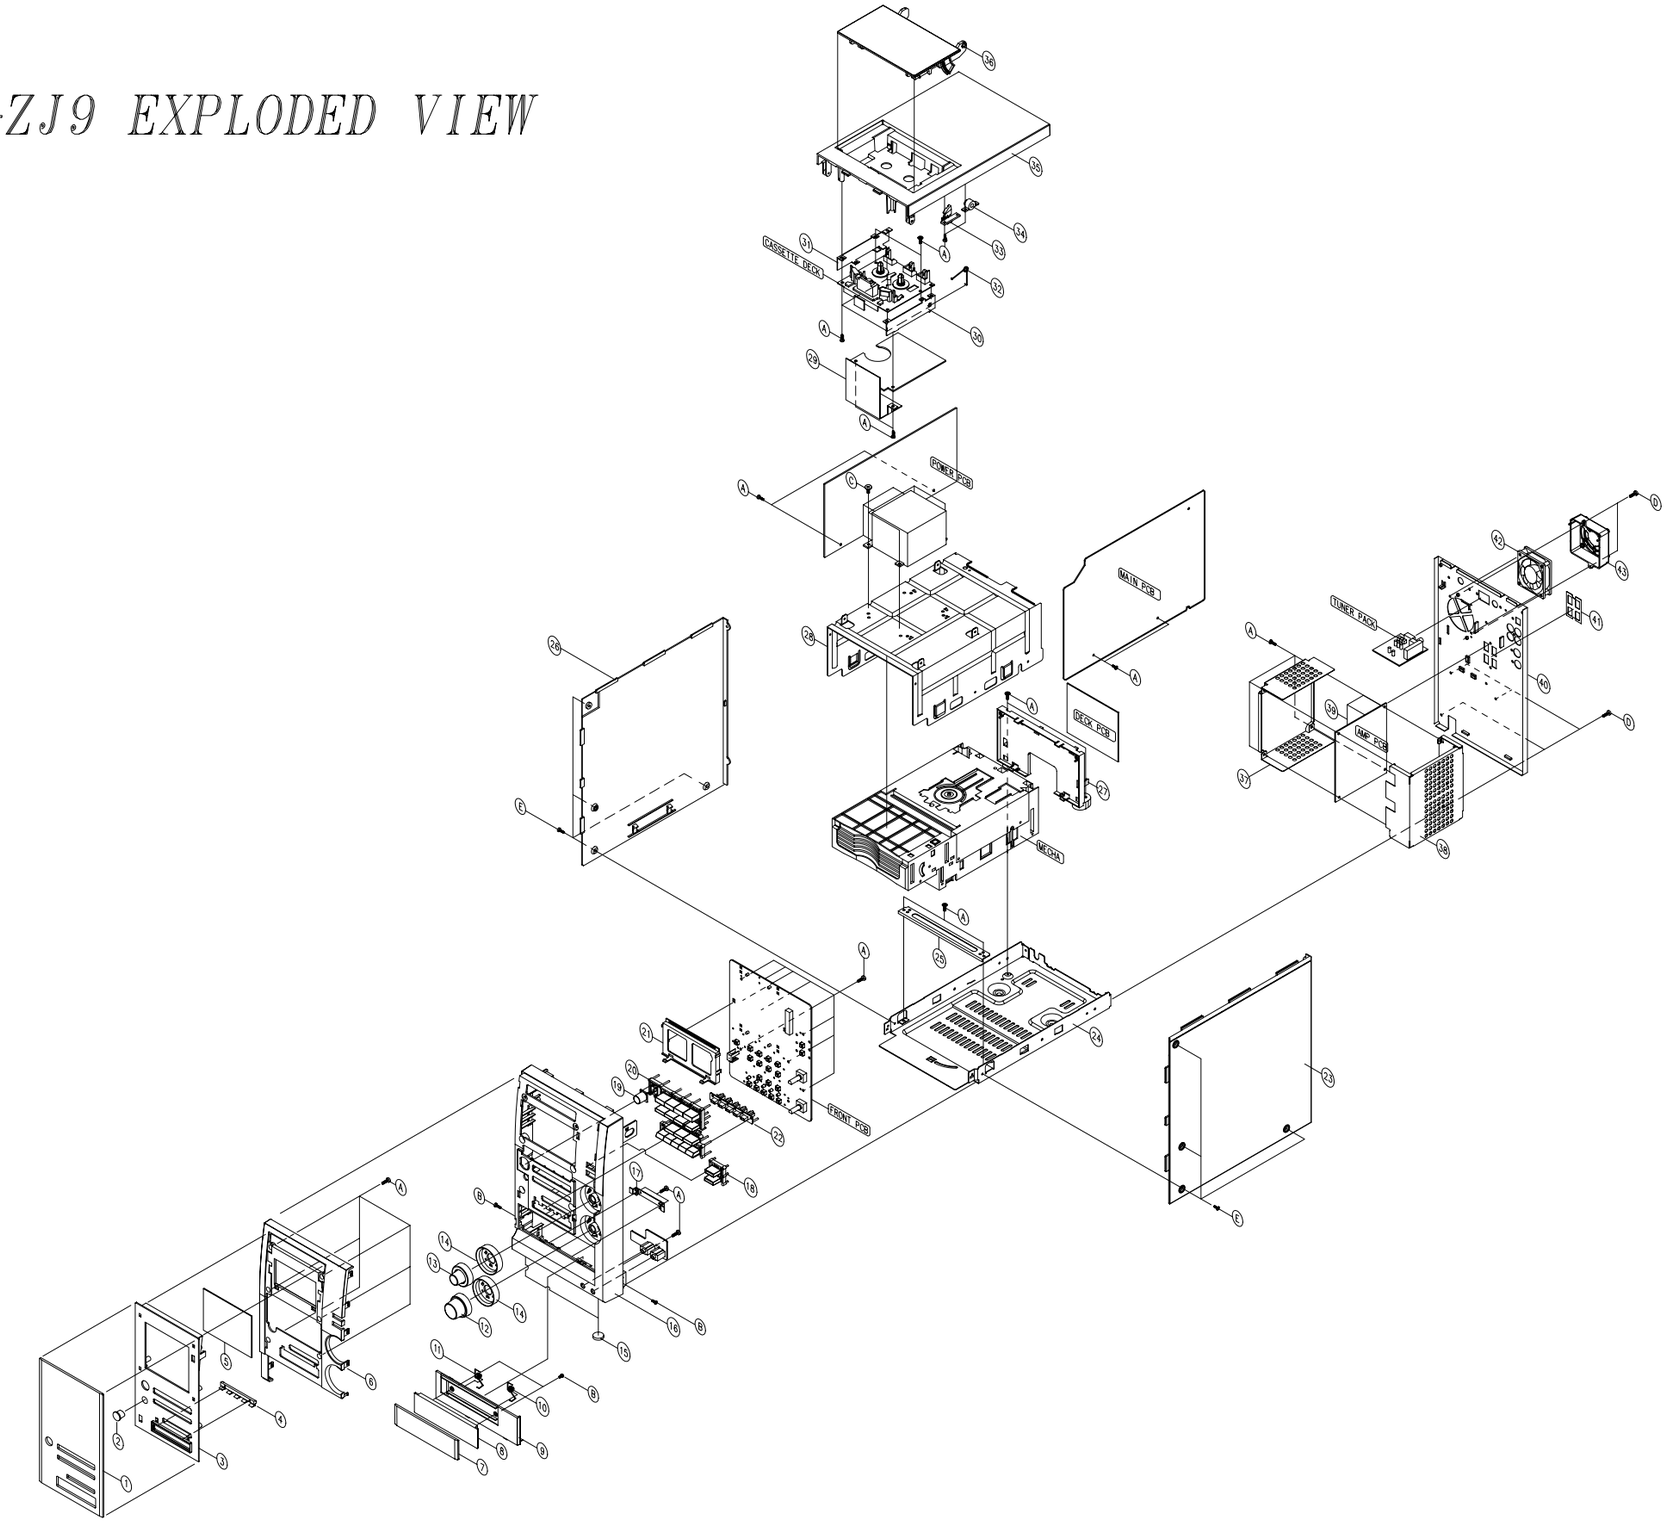

*** Parts List of The Exploded View**

No.	Code No.	Description	Q'TY	Remarks
1	AH64-02979B	WINDOW-VFD	1	NO-EUROPE
	AH64-02979D		1	EUROPE
2	AH67-00258C	LENS-PSOUND	1	
3	AH63-00711B	COVER-FRONT	1	
4	AH67-00289A	LENS-DISC	1	
5	AH63-00826A	SHEET-VFD	1	
6	AH64-02966B	DECO-FRONT	1	
7	AH64-02980A	WINDOW-CD DOOR	1	
8	AH64-02969B	DECO-CD DOOR	1	
9	AH64-02968B	DOOR-CD	1	
10	AH61-01598B	SPRING-CD DOOR,R	1	
11	AH61-01598A	SPRING-CD DOOR,L	1	
12	AH64-03198A	KNOB-VOL ASSY	1	
13	AH64-03199A	KNOB-JOG ASSY	1	
14	AH64-02974B	DECO-VOLUME	1	
15	AH73-00011B	RUBBER-FOOT	1	
16	AH64-02962B	CABINET-FRONT	1	NO-EUROPE
	AH64-02962C		1	EUROPE
17	AH61-01616A	BRKT-CD DOOR	1	
18	AH64-02971B	KNOB-DISPLAY	1	
19	AH64-02975B	DECO-POWER	1	
20	AH64-02970B	KNOB-FUNCTION	1	
21	AH61-01590A	HOLDER-VFD	1	
22	AH61-01684A	HOLDER-DISC	1	
23	AH64-02965B	CABINET-SIDE,R	1	
24	AH64-02976A	CABINET-BOTTOM	1	
25	AH61-01593A	BRKT-MECHA	1	
26	AH64-02964B	CABINET-SIDE,L	1	
27	AH61-01589A	HOLDER-PCB	1	
28	AH61-01592A	FRAME-CHASSIS	1	
29	AH63-00782A	SHIELD-DECK	1	
30	AH61-01595A	BRKT-DECK R	1	
31	AH61-01594A	BRKT-DECK L	1	
32	AH61-00857A	SPRING-DOOR	1	
33	AH95-50001A	LATCH ASSY	1	
34	AH61-80030A	DAMPER ASSY	1	
35	AH64-02963B	CABINET-TOP	1	
36	AH64-02967B	DOOR-CASS	1	
37	AH61-01596A	BRKT-PCB A	1	
38	AH61-01597A	BRKT-COVER A	1	
39	AH62-00124A	HEAT-SINK,MAIN	1	
40	AH64-02977B	CABINET-REAR	1	EUROPE
	AH64-02977C		1	NO-EUROPE
	AH64-02977D		1	UMG
41	AH63-00837A	SHEET-SPEAKER	1	
42	AH31-00039B	DC FAN	1	
43	AH63-00517A	COVER-FAN	1	
A	6003-000283	SCREW-TAPTITE		
B	6003-001464	SCREW-TAPTITE		
C	6003-001463	SCREW-MACHINE		
D	6003-000282	SCREW-TAPTITE		

2-3 SPEAKER Exploded View and Parts list

* CAUTION : It is used the bonding, connect FRONT PANEL to CABINET WOODEN.
So when the disassembly, take extreme care not to damage the SPEAKER.

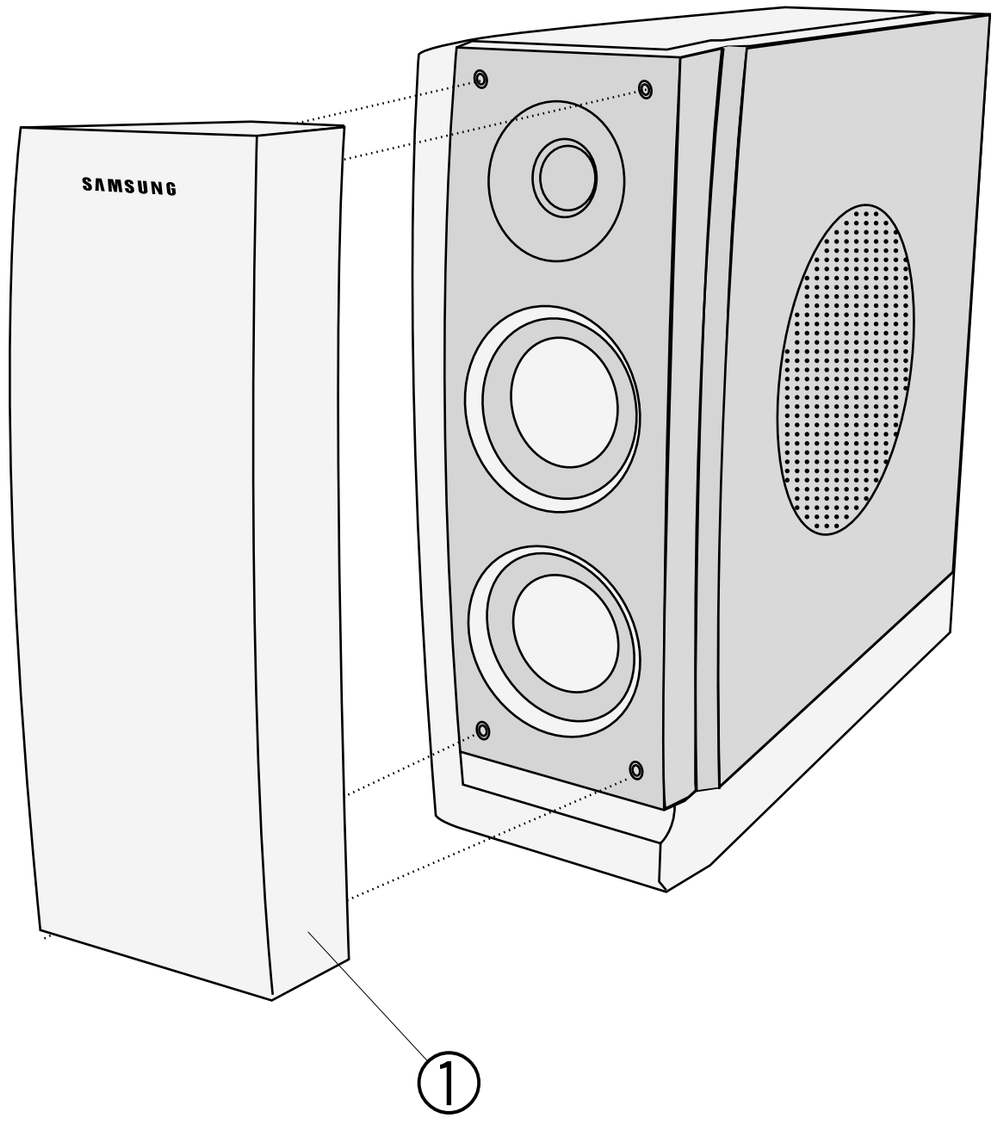

NO.	CODE NO.	Description
	AH59-01367B	**PSZJ9E**
	AH81-01452A	**SPEAKER "L" 1PC**
	AH81-01452B	**SPEAKER "R" 1PC**
①	AH81-01452J	FRAME NET